

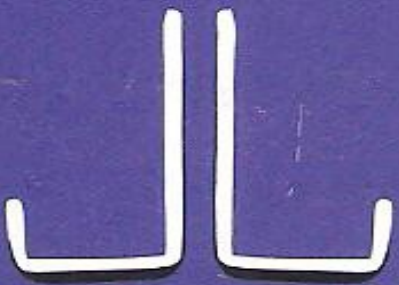


FIXING DETAIL FOR WRITING BOARDS


[®]
promark
www.promark.co.in

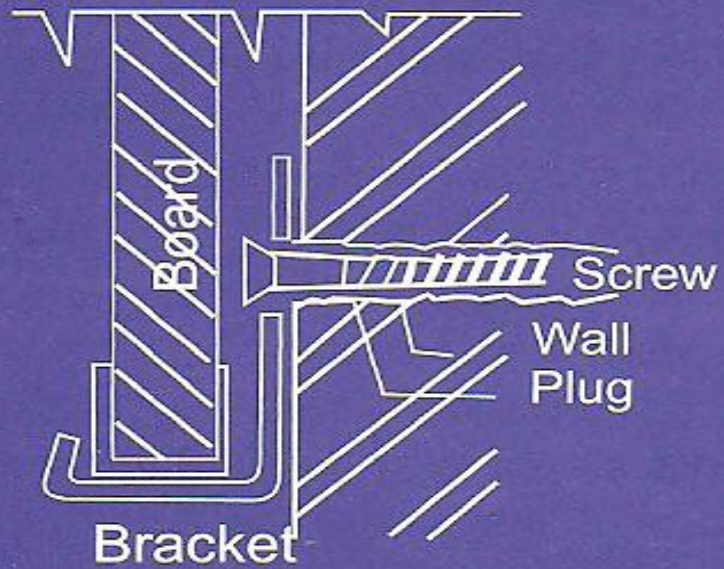

BRACKET

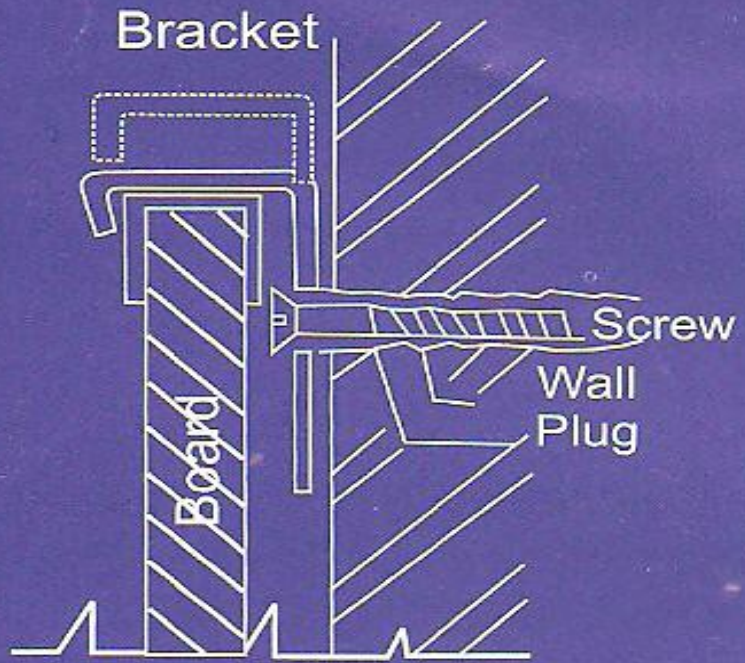

WALL PLUG

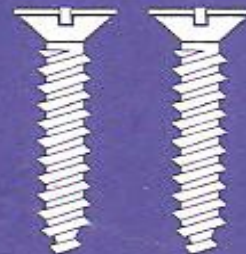

SCREW

KINDLY FOLLOW THE INSTRUCTIONS

1. Take a center of the wall at which board is to be installed, so that the boards should be placed exactly in the center of the class room.
2. Drill the hole in the wall above the level at which the bottom of the board is to rest.
3. Fix plastic wall plug in the holes and fix bracket into the lower hole with screw. The bracket should be pulled down so that the screw is at the upper end of the slot. Then the screw should be tightened.
4. Minimum two brackets at the bottom for smaller size & three for bigger size are required.
5. Place the board on the two brackets installed at the bottom.
6. Mark the upper side of the board with pencil.
7. Put the board down, and place the upper side of the bracket on the mark made.
8. Now make a mark in the center of the hole of the bracket.
9. Mark should be exactly above the hole drilled in step 2. So that the bracket comes exactly above the lower bracket
10. Fix plastic wall plug in the holes and fix bracket into the upper hole with screw. The bracket should be pulled upward, so that the screw is at the lower end of the slot. Then tighten the screw.
11. Place the board on the lower brackets. Slide the upper bracket upwards and push the board against the wall, and again slide the bracket back to its place

For all enquiries contact us at:
info@promark.co.in

